





# BE SAFE BY TAKING CARE OF YOUR RESCUE LADDER

**Telesteps Maintenance Program is a concept for Your Safety.**

For reasons of **safety** and **functionality**, the Rescue Ladder must always be kept clean, particularly the telescopic tubes and rungs. Dirt, filings, paint spots, glue etc. must be cleaned after each use, and before the ladder is closed. If your ladder is soaking wet, fully extend the ladder, wipe off and keep it extended until the ladder are completely dry.

The ladder is not safe if any of the parts are damaged or worn out. Don't use the ladder if needs to be repaired. Replace damaged parts or/and contact your authorized service workshop for assistance. Any repair work must always be carried out by an authorized service workshop.

Treat your Rescue Ladder with care and it will retain its unique properties. Follow strictly recommendations and steps, in order to always have a safe Rescue Ladder ready for saving life: **BEFORE USE – AFTER USE – YEARLY INSPECTION**

---

## MAINTENANCE KIT

To even **extend** the functionality and secure **the safety** of your ladder we have created a maintenance kit including a cleaning sponge and a microfiber towel.

Telestep's unique melamine cleaning sponge easily solves the task without damaging the surface. A problem solving product for maintaining your product and removing hard stains and ingrown dirt. Moisten only with water, no chemicals needed. Telesteps thinks about your safety and the environment.



# SPARE PARTS


**Our high quality makes the products last a long time. Very long time.**

This causes a few parts to wear out and sometimes have to be replaced. On our website you can find some of our spare parts that you can easily replace yourself to maintain the high level of safety.



## RUBBER TOP AND FEET

No matter what ladder line you have purchased we can offer you new rubber top and feet.

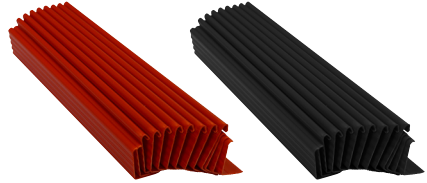

## STEP COVER

When your step cover is worn out you can easily order new ones and your steps will be as safe as from day one!

---

## BEFORE USE

- Your ladder is a precision tool, handle with care
- Ensure that you are fit to use the ladder
- Ocular inspection for buckles, fractures
- Locking of rungs works properly
  - open/close
- Red buttons under the rungs are visible
- Rubber top and foot in proper condition
- Test that brake function is working
- Rungs and dirt channels are clean
- Accessories assembled works properly
- Make sure all instruction labels are intact and readable

## AFTER USE

- Clean the ladder properly from all dust
- If the ladder is wet, fully extend the ladder and wipe off
- If your ladder is soaking wet, fully extend the ladder, wipe of and keep it extended until the ladder is completely dry
- Ocular inspection for buckles, fractures
- Store the ladder in dry environment

# YEARLY INSPECTION PROGRAM

The Yearly Inspection is to create a repetitive yearly routine and review the condition of the Product.

- Identify the Rescue Ladders ID number – you find the ID under the bottom rung
- Fill in ID in the matrix below, which follows the Products entire lifecycle
- Follow instructions of BEFORE and AFTER USE
- If needed, perform repairs (only by authorized personnel!)
- Repairs to be noted in the matrix
- Sign for each performed inspection

RESCUE LINE			
Purchase date			
ID			
Year	Date	Note	Signature
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			